

AMSTRAD
Amplifier

Mode Loudness Rumble Scratch



m s




on off



on off



on off

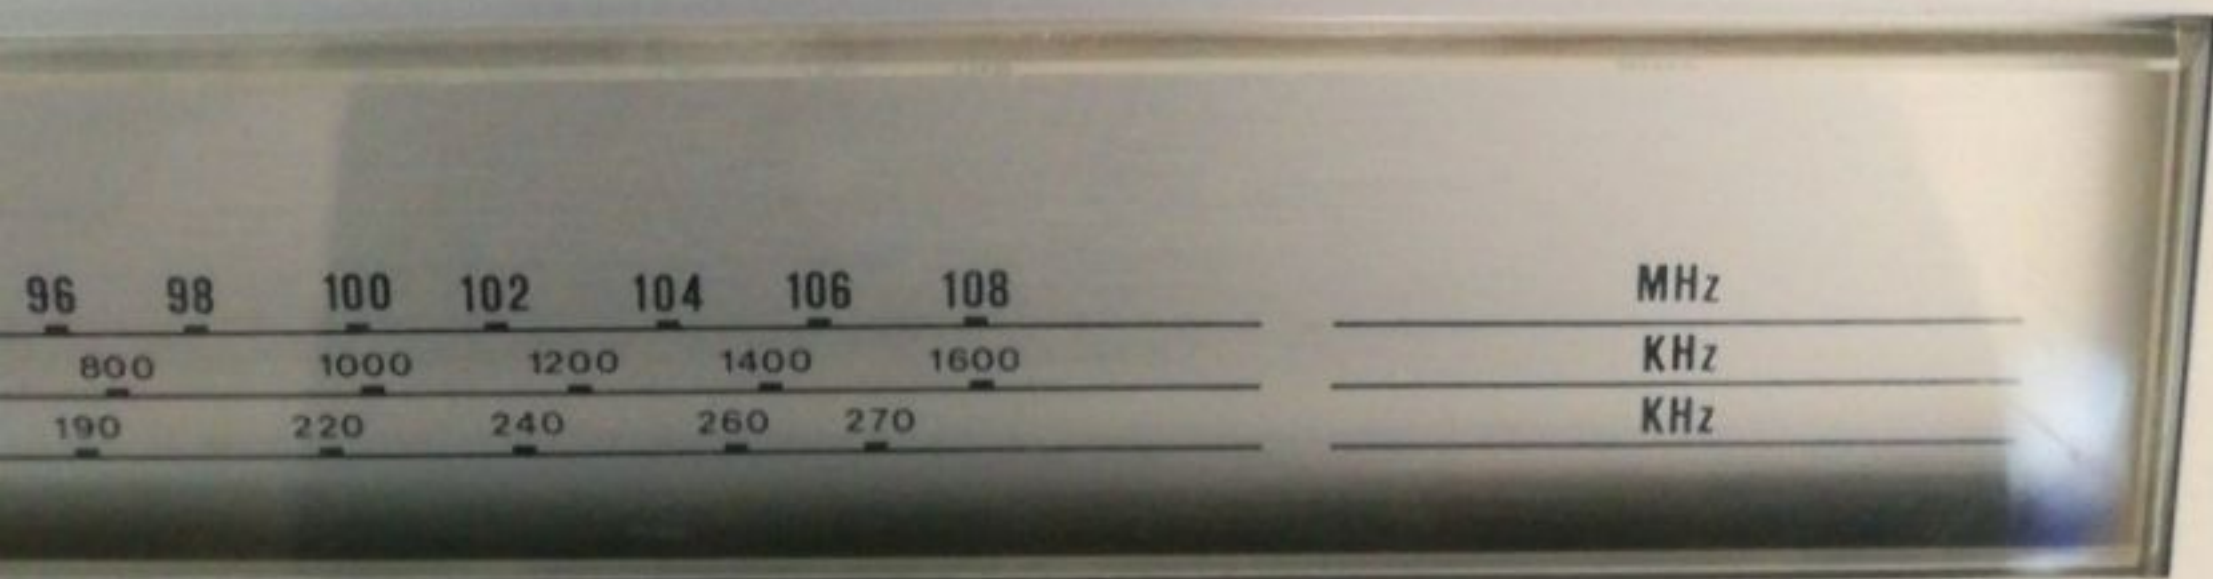

Muting




Afc




AMSTRAD
Stereo Tuner



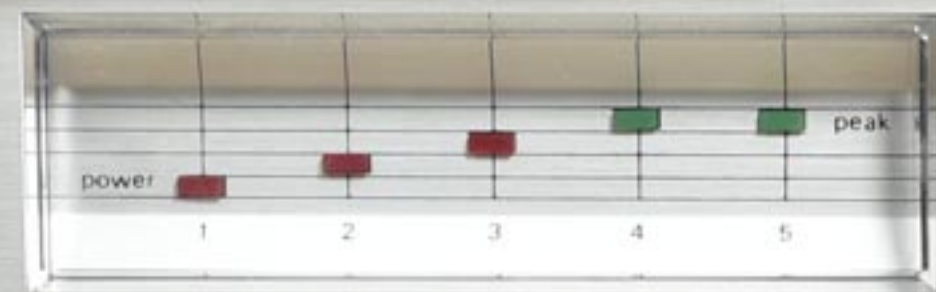

Output Power Indication

Power
on
off

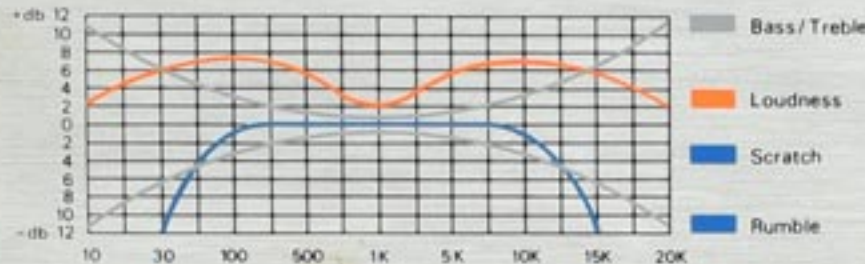

AMSTRAD Stereo Amplifier

Mode Loudness Rumble Scratch

m s on off on off on off on off

Treble
1 0 1
2 3 4 5

Bass
1 0 1
2 3 4 5


Balance
1 0 1
2 3 4 5

Selector
lw fm tape
mw phono

Volume


4 5 6 7 8 9 10
3 2 1 0

Phones

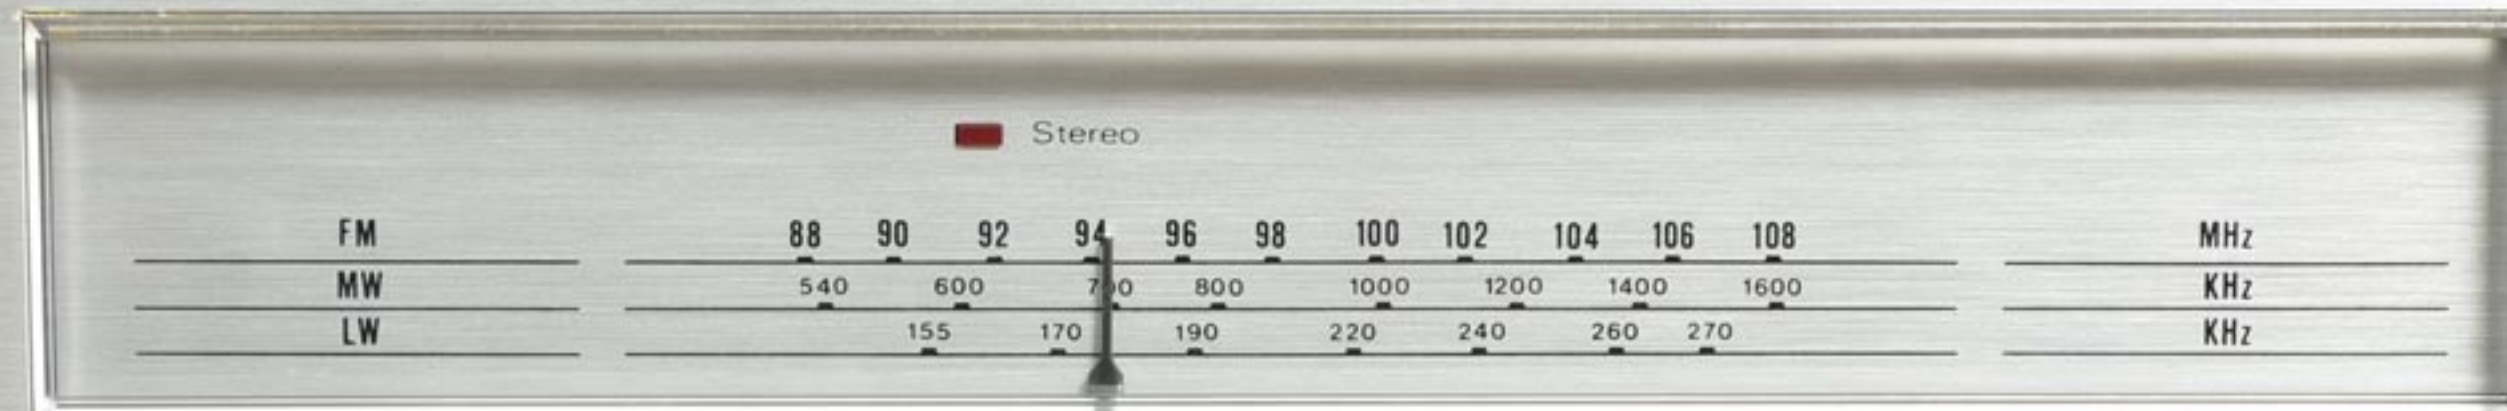

Tuning

Volume knob

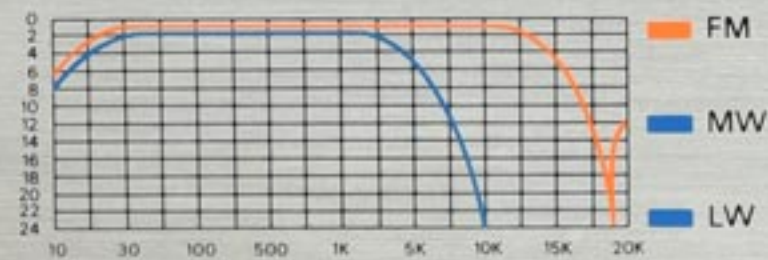

Muting Afc
on off on off

AMSTRAD Stereo Tuner



Counter Reset
4 6 8
5 7 3


AMSTRAD Stereo Cassette Deck



Record Level Indication

Tape Selector Noise Reduction
CrO₂ metal on
normal off

L Mic R

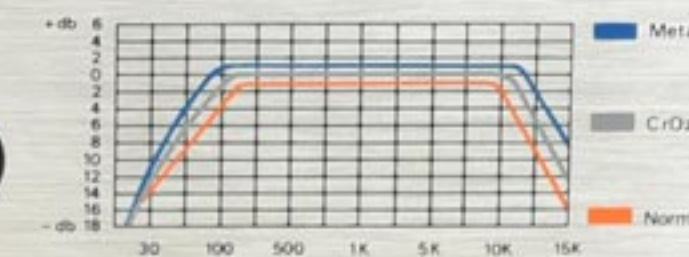

Level

4 5 6 7 8 9 10
3 2 1 0

Rec Rew FF Play Stop/Eject Pause