



MW	MEDIUM WAVE	54	60	70	80	100	120	140	160	KHz		
LW	LONG WAVE	150	170	200	240	280	300			KHz		
FM	FREQUENCY MODULATION	88	92	98	102	108				MHz		
AIR	AIRCRAFT				115	125	130	135		MHz		
MB	MARINE		4	4.2	4.5	5	5.5	6		MHz		
SW	FOREIGN	7	8	9	10	12	14	16	18	20	22	MHz
SW	FOREIGN		2.5	3	3.5	4	5	6	7		MHz	

**AMSTRAD**

MULTI-BAND RECEIVER

EARPHONE

BASS

TREBLE

VOLUME

MODEL 6010

LO

HI

LO

HI

LO

HI

TUNING FINE TUNING

TUNING EYE

MB MW LW  
SW1 FM  
SW2 AIR

BAND SELECTOR

POWER

D.C.

ON


AC

OFF







TUNING  FINE TUNING



TUNING EYE



BAND SELECTOR

MULTI-BAND RECEIVER



TREBLE

VOLUME



POWER

DC

ON

AC

OFF

OUTER DIAL  
TIME OF DAY



ZONE NO.



INNER DIAL  
ZONE NO.

**AMSTRAD**

MODEL 6010

DISCONNECT THE MAINS PLUG FROM THE  
SUPPLY SOCKET WHEN NOT IN USE  
MAINS SUPPLY : 240V ~ 50Hz  
BATTERIES : 4x1.5V (HP2)  
DISCONNECT FROM MAINS SUPPLY  
BEFORE REMOVING BACK PANEL  
MADE IN HONG KONG





MW	MEDIUM WAVE	54	60	70	80	100	120	140	160	x100 KHz		
LW	LONG WAVE	150	170	200	240	280	300			KHz		
F.M.	FRESH MODULATION	88	92	9	102	108				MHz		
AIR	AIRCRAFT			115	125	130	135			MHz		
M.B.	MARINE	4		4.2	4.5	5	5.5	6		MHz		
SW1	FOREIGN	7	8	9	10	12	14	16	18	20	22	MHz
SW2	FOREIGN	2.5		3	3.5	4	5	6	7		MHz	

**AMSTRAD**

MULTI-BAND RECEIVER

EARPHONE

BASS

TREBLE

VOLUME

MODEL 6010

LO HI

LO HI

LO HI

TUNING FINE TUNING

TUNING EYE

MB MW LW FM AIR

BAND SELECTOR

POWER

DC ON AC OFF











OUTER DIAL  
TIME OF DAY

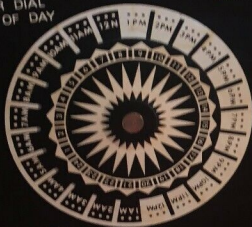

ZONE NO.

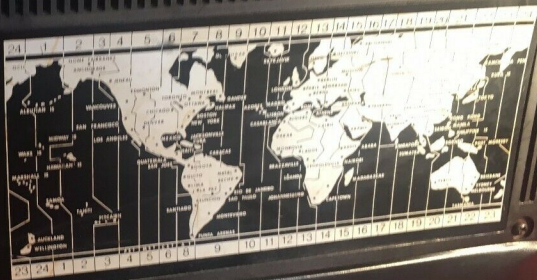

INNER DIAL  
ZONE NO.

**AMSTRAD** MODEL 8010  
DISCONNECT THE MAINS PLUG FROM THE  
SUPPLY SOCKET WHEN NOT IN USE  
MAINS SUPPLY : 240V ~ 50Hz  
BATTERIES : 4 x 1.5V (HP2)  
DISCONNECT FROM MAINS SUPPLY  
BEFORE REMOVING BACK PANEL  
MADE IN HONG KONG





# AMSTRAD



MULTIBAND RADIO  
MARINE, FM/AIR,  
LW, MW, SW1, SW2

MODEL 6010

INSTRUCTION MANUAL

