

Amstrad

STEREO

CASSETTE PLAYER

B.B.S.

BASS BOOST SYSTEM


AUTO STOP



Amstrad

Personal Stereo
Cassette Player

User
friendly

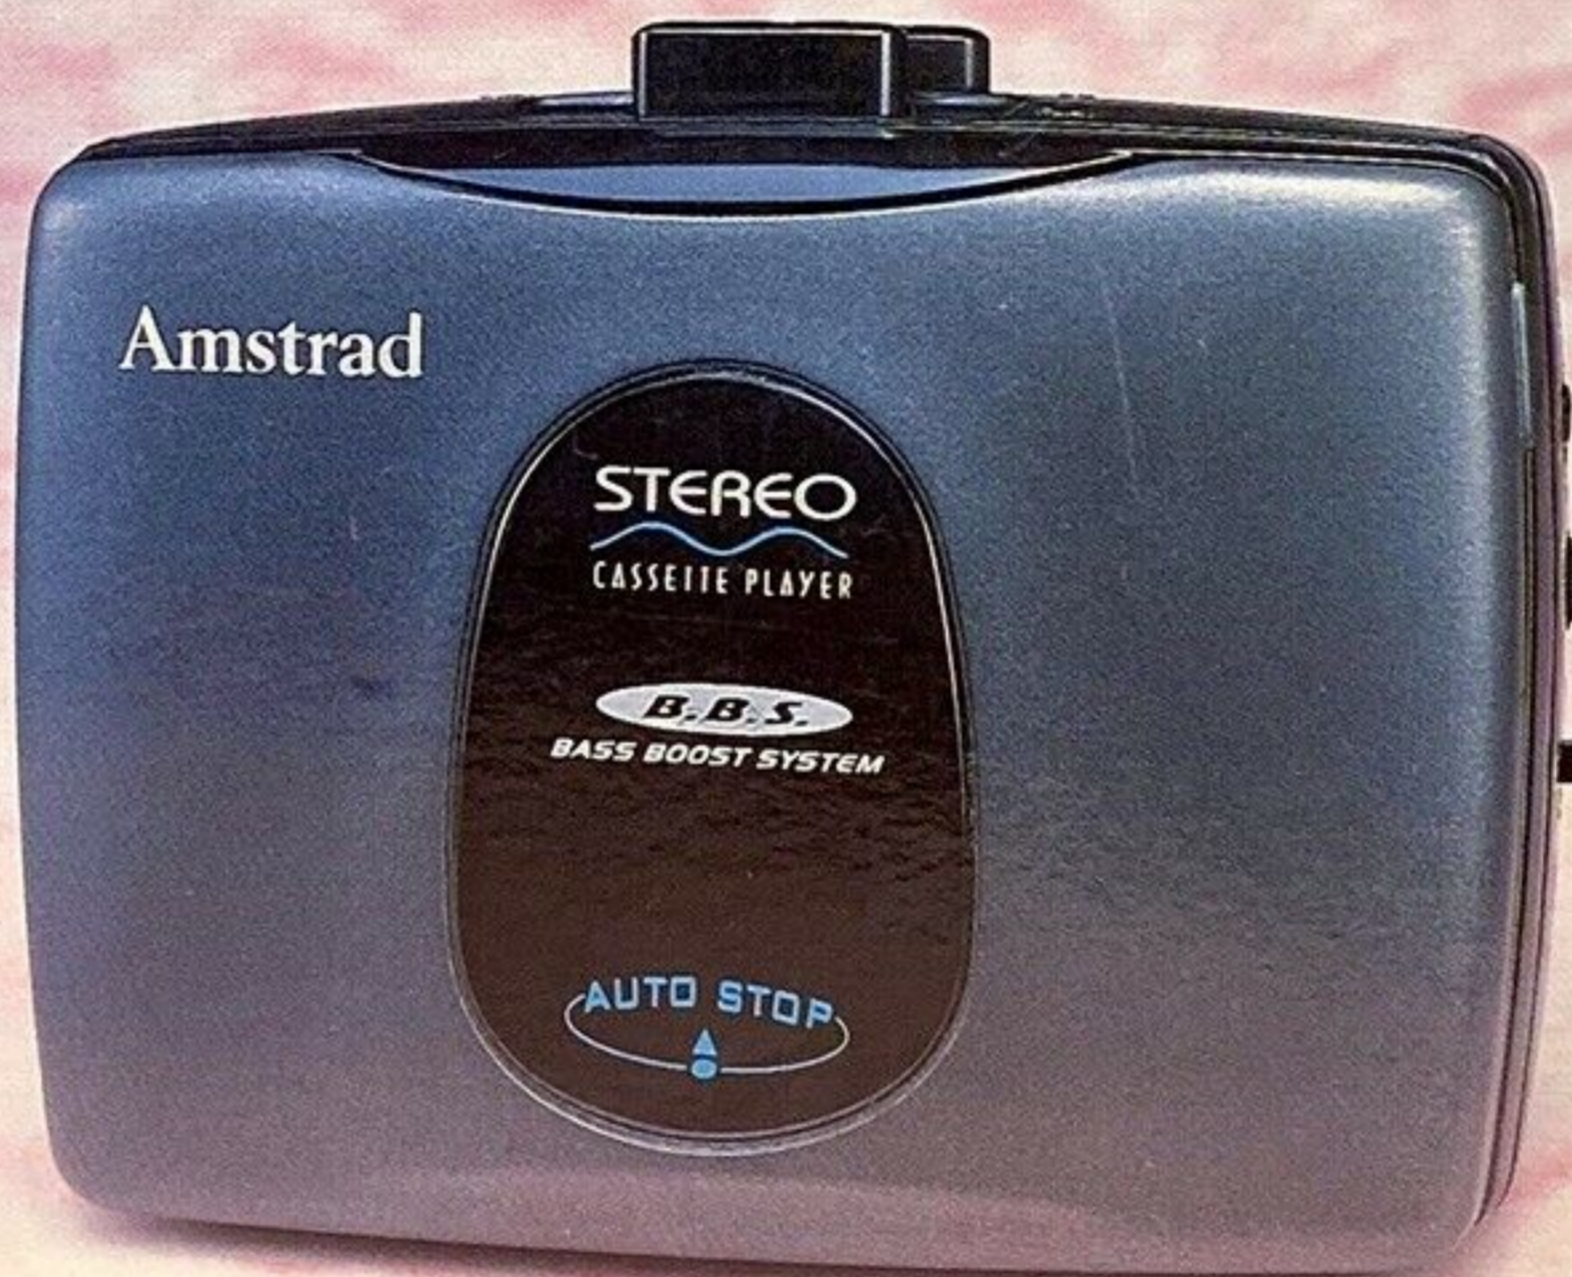

Model No: MX10

Do not use poor quality tapes in this unit. As slack tape can
tape if necessary.

Headphones

Connect the headphones to the headphone jack.

Playback

Insert the tape as instructed and press the PLAY button. Ad
Press STOP to stop the tape at any time.

Bass Boost

Switch ON to amplify low range frequencies. This is most no

Automatic Stop

When the tape end is reached, play back will stop. The PLAY

Fast Forward

Press the F.F. button to wind to the end of a tape. The mo
releases automatically.

©1995 Amstrad plc
43089






Amstrad

STEREO
CASSETTE PLAYER

B.B.S.
BASS BOOST SYSTEM

AUTO STOP

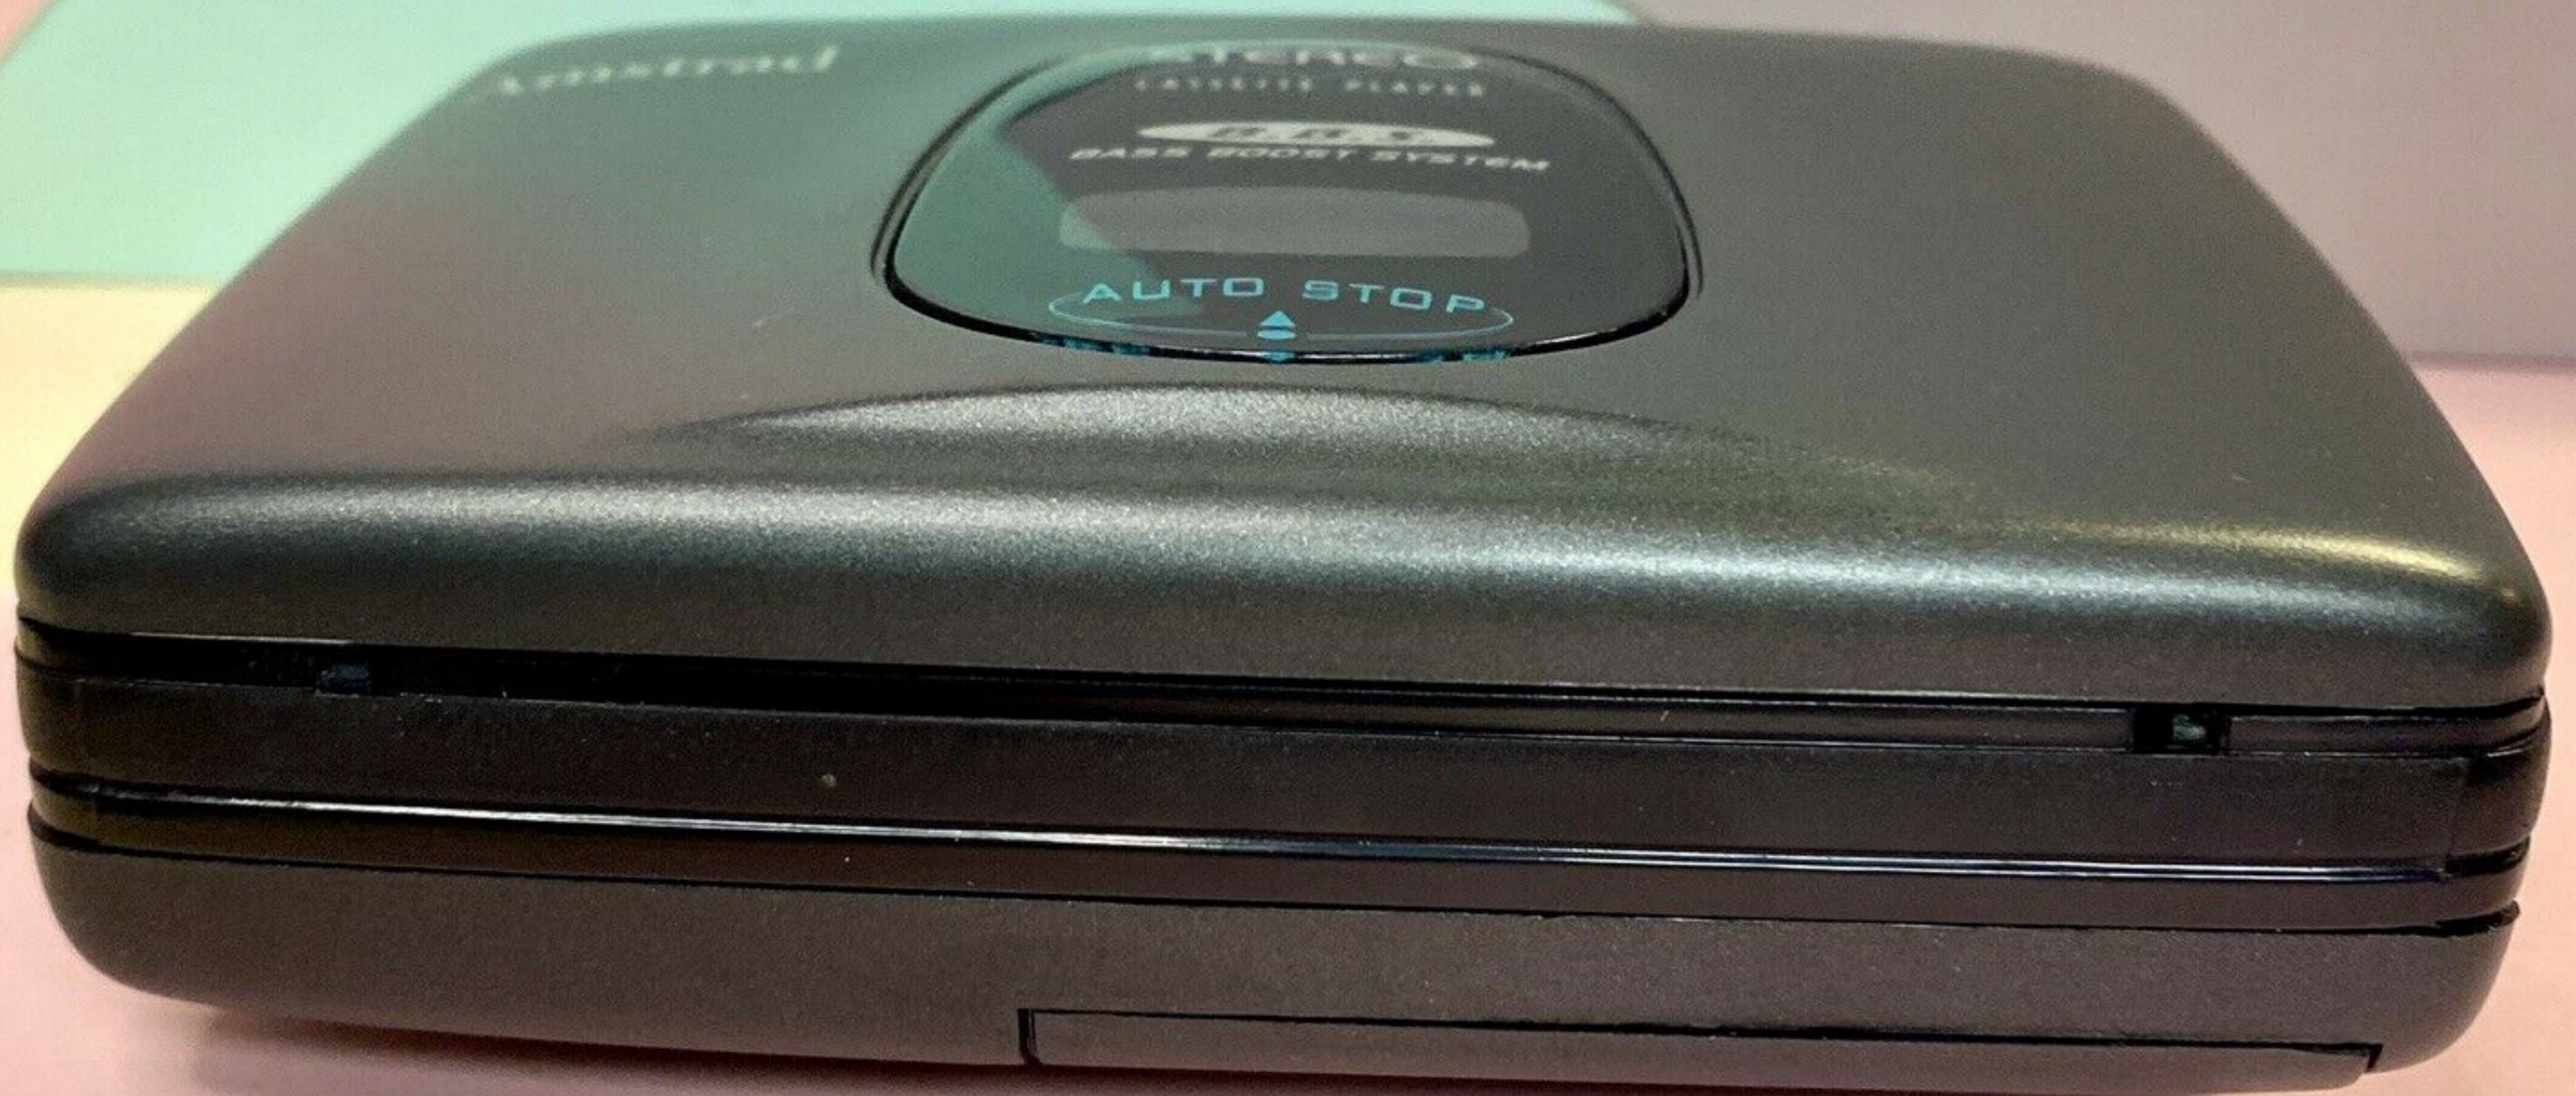



Amstrad MX10
PERSONAL STEREO CASSETTE PLAYER
POWER SUPPLY: DC3V (LR6 X 2 OR EQUIVALENT)
MADE IN CHINA



MX961026543

⊖ ⊕
3x 1.5V XLS
(INDIA: 14A SIZE: HR-7-00)





AUTO STOP

BASS BOOST SYSTEM

B.B.S.

CASSETTE PLAYER

STEREO

Amstrad

STEREO

CASSETTE PLAYER

B.B.S.

BASS BOOST SYSTEM

AUTO STOP

direction of the arrow. To
right of the compartment
DEDED.
Always remove bat

side of the tape when
or similar ob

level.

and

⊖
DC 1.5V X 2
LR6-3 AA SIZE (RP-7 RS)
⊕

Amstrad

MX10

PERSONAL STEREO CASSETTE PLAYER

POWER SUPPLY: DC3V (LR6 X 2 OR
EQUIVALENT)

MADE IN CHINA



MX961011338



MX10 LECTEUR DE CASSETTES STÉRIO PORTABLE

Equipement des cassettes
 1. Support de cassettes
 2. Bouton de lecture
 3. Bouton de pause
 4. Bouton de stop
 5. Bouton de marche arrière
 6. Bouton de marche avant
 7. Bouton de réglage de la vitesse
 8. Bouton de réglage de la tension
 9. Bouton de réglage de la balance
 10. Bouton de réglage de la résonance

MX10 PORTABLE STEREO CASSETTE PLAYER

Control Location
 1. Cassette slot
 2. Play button
 3. Stop button
 4. Fast Forward button
 5. Rewind button
 6. Speed control (for variable speed)
 7. Volume control (for variable speed)
 8. Balance control (for variable speed)
 9. Resonance control (for variable speed)

Battery Installation
 The MX10 cassette player uses four AA batteries. The batteries are inserted into the battery compartment on the back of the player. The use of four AA batteries is recommended. The use of other types of batteries is not recommended.

Maximum shelf storage of a tape
 Store the tape in its original case. The tape should be stored in a cool, dry place. The tape should be stored in its original case. The tape should be stored in its original case.


Page Cue
 The tape can be automatically stopped at the end of each page. To use this feature, insert a page cue at the end of each page.

Headphones
 Connect the headphones to the telephone jack.

Playback
 Insert the tape in the cassette slot and press the PLAY button. Adjust the VOLUME or the REVERSE button. Press STOP to stop the tape at the end.

Fast Forward
 Press the FF button on the end of a tape. The motor stops when the tape is reached and the FF button is released.

© 1981 Amstrad plc
 51X/PP

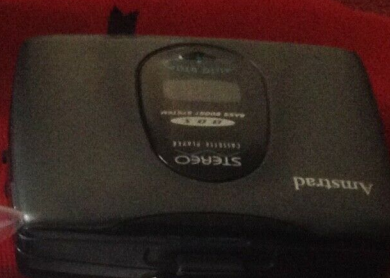

PORTABLE **F**

MX10 LECTEUR

- Emplacement des cot**
1. Bouton de volume
 2. Prise casque
 3. Trappe du cassette
 4. Touche STOP
 5. Touche F.F. (avance)
 6. Touche PLAY
 7. Clip pour casque
 8. Compartiment r
 9. Amplification d

Installation de

Chavez le compa
par les flèches, ins
de la droite du c
L'UTILI
Les piles usag

Chavez la
orienté v
ARRÊTE.

Entre
Nivells
Retene

Con
Cas
Con


Le
in
A

MX10 PORTABLE STEREO CASSETTE PLAYER

UK

Control Location

1. Volume knob
2. Headphone jack
3. Cassette door
4. STOP button
5. F.F. (Fast Forward) button
6. PLAY button
7. Belt clip (may be removed if not required)
8. Battery compartment (rear of unit)
9. Bass boost

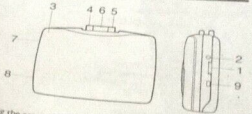

Battery Installation

Open the battery compartment on the rear of the unit by sliding the cover gently in the direction of the arrow. Insert two AA size batteries (LR1, LR1.5, R4 or equivalent) according to the polarity diagram on the right of the compartment. Replace the cover.

THE USE OF HIGH POWER ALKALINE BATTERIES IS RECOMMENDED.
Old batteries can leak and cause corrosion, so never leave run down batteries in your unit. Always remove batteries if the unit will not be used for a long period of time.

Insertion and removal of a tape

Open the cassette door. Insert the tape into the door between the two hooks. The open side of the tape should be as the cover. Always STICK the tape before opening the door.

Tape Care

Do not use poor quality tapes in this unit. As stack tape can jam in the mechanism, use a pencil or similar object to separate the tapes if necessary.

Headphones

Connect the headphones to the headphone jack.

Playback

Insert the tape as instructed and press the PLAY button. Adjust the VOLUME to the required level. Press STOP to stop the tape at any time.

Bass Boost

Switch ON to amplify low range frequencies. This is most noticeable at lower volumes.

Automatic Stop

When the tape end is reached, play back will stop. This is most noticeable at lower volumes.

Fast Forward

Press the F.F. button to wind to the end of a tape. The motor stops when the tape end is reached and releases automatically.



575173
X175


Amstrad
Personal Stereo
Cassette Player

Amstrad
Personal Stereo
Cassette Player

User
friendly



Model No. MX10

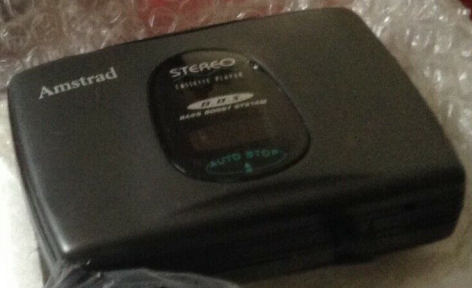

ADDITIONAL
FEATURES

MX10 LECTURE

MX10 PORTABLE STEREO CASSETTE PLAYER


TABLE 1

Employment and Use
This cassette player is designed for use in the following situations:
- Personal use
- Public use
- Commercial use
- Industrial use
- Professional use
- Educational use
- Entertainment use
- Sports use
- Military use
- Law enforcement use
- Medical use
- Research use
- Government use
- Other uses as approved by the manufacturer.

Control Location
The controls are located on the front panel of the cassette player. The controls are:
- Power On/Off
- Play/Pause
- Stop
- Eject
- Volume
- Balance
- Bass/Treble
- Mute
- Headphones
- Headset
- Carrying Strap

Battery Installation

THIS USE OF NON-POWER ALKALINE BATTERIES IS RECOMMENDED.
The MX10 cassette player is powered by four AA alkaline batteries. The batteries are inserted into the battery compartment on the back of the cassette player. The battery compartment is located on the back of the cassette player. The battery compartment is shown in the diagram below.

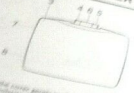

Power Save

The MX10 cassette player has a power save feature. The power save feature is activated when the cassette player is in the standby mode. The power save feature is shown in the diagram below.

Headphones

Connect the headphones to the headphone jack. The headphones are shown in the diagram below.

Playback

Insert the tape as mentioned and press the PLAY button. Adjust the VOLUME to the required level. Press STOP to stop the tape in any time.

Bass Boost

Press the BASS BOOST button to activate the bass boost feature. The bass boost feature is shown in the diagram below.

Automatic Stop

When the tape runs out, the cassette player will automatically stop. The automatic stop feature is shown in the diagram below.

Fast Forward

Press the FF button to fast forward the tape. The fast forward feature is shown in the diagram below.



OUTLINE DI MUXI
PIVILE
©1983 Amstrad plc
43089

MX10 PORTABLE STEREO CASSETTE PLAYER

General Location
 - Volume knob
 - Play button
 - Stop button
 - Stop button
 - Rewind button
 - Fast Forward button
 - Eject button
 - Headphones jack
 - Bass Boost button
 - Motor (under cover of case)

Battery Installation
 Always handle the batteries in the open end of the case by taking the cover gently in the direction of the arrow. Never touch the positive (+) or negative (-) terminals of the battery together or to any other metal component. Be sure to use the correct size and type of battery. Always restore batteries to your unit. Always restore batteries to your unit.

THE USE OF LEADY POWER ALKALINE BATTERIES IS RECOMMENDED.

Prevention and removal of a tape
 When the cassette cover is closed, the tape is held between the two heads. The open side of the tape should be at the top. To prevent the tape from being damaged, always hold the tape firmly in the top "L" shape on the other between the two heads. The open side of the tape should be at the top. To prevent the tape from being damaged, always hold the tape firmly in the top "L" shape on the other between the two heads.

Tape Care
 Do not use poor quality tapes in this unit. As slack tape can jam in the mechanism, use a pencil or similar object to tighten the tape if necessary.

Headphones
 Connect the headphones to the headphones jack.

Playback
 Insert the tape as instructed and press the PLAY button. Adjust the VOLUME to the required level. Press STOP to stop the tape at any time.

Bass Boost
 Switch ON to amplify low range frequencies. This is most noticeable at lower volumes.

Automatic Stop
 When the tape end is reached, play back will stop. The PLAY button is released automatically.

Fast Forward
 Press the FF button to wind to the end of a tape. The motor stops when the tape end is reached and the FF button releases automatically.

