

INKEY (N°)

CPC 6128 QWERTY

66	164	265	357	456	549	648	741	840	933	032	-25	↑24	CL16	DL79
TAB68	Q67	W59	E58	R50	T51	Y43	U42	I35	O34	P27	@26	17	18	
CAPS70	A69	S60	D61	F53	G52	H44	J45	K37	L36	:29	;28	19		
SHIFT 21	Z71	X63	C62	V55	B54	N46	M38	,39	.31	/30	22	SHIFT 21		
CTRL 23	COPY 9	47										ENTER 6		



=

	-1	f710	f811	f93
	0	f420	f512	f64
+ Shift	32	f113	f214	f35
+ Ctrl	128	f015	↑0	.7
+ Shift Ctrl	160	←8	↓2	→1

H	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□
1	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□
2	!	"	#	\$	%	&	'	()	*	+	,	-	.	/	
3	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?
4	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
5	P	Q	R	S	T	U	V	W	X	Y	Z	[\]	^	_
6	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o
7	p	q	r	s	t	u	v	w	x	y	z	{		}	~	□

H	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
8	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□	□
9	.		-	_												
A	^	°	£	@	¶	§	¶	14	12	34	±	÷	→	←	⊗	⊗
B	α	β	γ	δ	ε	θ	λ	μ	π	σ	τ	χ	ω	Σ	Ω	
C	~	\	/	^	>	<	<	>	<	>	<	>	<	>	<	>
D	~															
E	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗
F	↑	↓	←	→	↖	↗	↘	↙	↘	↙	↘	↙	↘	↙	↘	↙

03 04	04 01	04 01	01 01	01 10	10 09	09 09	09 12	12 12	12 03	03 00	00 00	00 13	
07	08	05	02	11	20	19	18	21	24	15	06	13	13 26
16 17	17	17 14	14	14 23	23	23 22	22	22 25	25	25 16	16	26	00 26