





DO NOT REMOVE THIS LABEL FROM THE BOX  
UNLESS YOU ARE SURE THE DEVICE IS  
PROTECTED BY THE ORIGINAL PACKAGING  
MATERIALS AND THE ORIGINAL LABELS  
ARE IN PLACE. IF YOU REMOVE THIS LABEL  
YOU WILL BE RESPONSIBLE FOR ANY DAMAGE  
TO THE DEVICE.

**FRAGILE**



**ONE YEAR GUARANTEE**

THESE PRODUCTS ARE GUARANTEED TO BE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP FOR A PERIOD OF ONE YEAR FROM THE DATE OF PURCHASE. IF YOU SHOULD FIND A DEFECT IN ANY OF THESE PRODUCTS, PLEASE CONTACT THE MANUFACTURER IMMEDIATELY. THE GUARANTEE DOES NOT COVER DAMAGE TO THE PRODUCT CAUSED BY ACCIDENT, MISUSE, OR NEGLIGENCE. THE MANUFACTURER'S LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT. THIS GUARANTEE IS VOID WHERE PROHIBITED BY LAW.













HEAD

CHEETAH

TRADE MARK



CHEETAH

TORTOISE





PLEASE READ BEFORE USE  
INSTRUCTIONS

THE CHEETAH RANGE OF JOYSTICKS ARE COMPATIBLE WITH A WIDE RANGE OF MACHINES. YOUR TORTOISE JOYSTICK INCORPORATES A BUILT-IN SELECTOR CONNECTOR. THIS TWIN LEAD CONTAINS A BLACK 9 PIN D TYPE CONNECTOR SUITABLE FOR DIRECT CONNECTION TO STANDARD JOYSTICK SOCKETS ON MACHINES SUCH AS COMMODORE 64, AMIGA, AMSTRAD CPC RANGE, ATARI HOME COMPUTERS AND VIDEO GAMES ETC. (FOR AMSTRAD PC COMPATIBILITY SEE DETAILS BELOW.) YOU WILL ALSO BE ABLE TO CONNECT TO THE SINCLAIR 16K, 48K AND 128K USING A JOYSTICK INTERFACE (SUCH AS THE CHEETAH JOYSTICK INTERFACE). IN THIS CASE - WHEN SELECTING "JOYSTICK" ON THE GAMES SCREEN - CHOOSE THE "KEMPSTON" OPTION.

YOUR TORTOISE JOYSTICK ALSO INCORPORATES A GREY CONNECTOR FOR USE WITH THE SINCLAIR SPECTRUM +2 AND +3 MODELS. THE GREY CONNECTOR CAN BE PLUGGED STRAIGHT INTO THE JOYSTICK PORTS ON THE MACHINE. CHOOSE SINCLAIR OR INTERFACE 2 OPTION ON SCREEN.

FOLLOW THE INSTRUCTIONS PROVIDED WITH THE GAME TO DETERMINE DIRECTIONAL AND FIRE CONTROLS.

CHEETAH JOYSTICK - AMSTRAD PC COMPATIBILITY

INSTRUCTIONS

THE CHEETAH TORTOISE JOYSTICK CAN BE USED WITH THE AMSTRAD PCS AS A GAMES CONTROLLER IF THE FOLLOWING INFORMATION IS IMPLEMENTED. (IT SHOULD BE NOTED THAT ONLY SOFTWARE WRITTEN FOR THIS TYPE OF JOYSTICK WILL FUNCTION CORRECTLY. MANY GAMES WILL REQUIRE A GAMES CARD AND ANALOGUE JOYSTICK ALSO AVAILABLE FROM CHEETAH.)

LOAD PROGRAM NVR FROM THE DISC SUPPLIED WITH THE MACHINE. WHEN THE MENU APPEARS ON THE SCREEN - SELECT THE JOYSTICK FIRE BUTTON OPTION. CHANGE FIRE BUTTON NOT TO SPACE BAR. EXIT TO DDS. SAVING THESE CHANGES THIS INFORMATION WILL THEN BE PERMANENTLY STORED IN THE COMPUTERS MEMORY. THEN SIMPLY PLUG THE BLACK CONNECTOR ON THE JOYSTICK INTO THE CORRECT PORT IN THE COMPUTER.

ENJOY YOURSELF