


DISK-CARE


3"

Disk drive head cleaning diskette

How to use the head cleaning diskette kit.

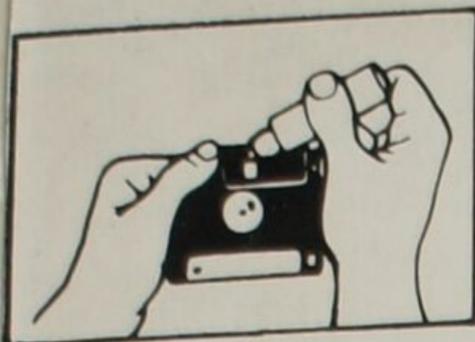


1. Dispense moderate amount of cleaning solution (approximately 2ml) onto lint-free, porous cleaning material through the large cutout in the jacket.
2. Insert cleaning diskette into drive, just like a regular diskette. Activate the drive for approximately 30 seconds.

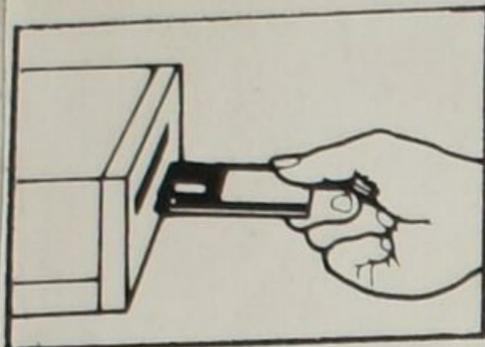

3. After cleaning remove the diskette, check off the usage on label. After 15 uses, or if the diskette becomes discolored with contamination, discard and use new cleaning diskette.

We recommend you clean your diskette drive heads at least once a week-more often if they receive heavy use.

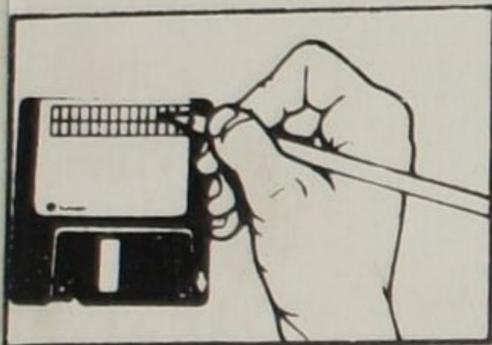

Caution:

1. 5¼" 3 3½" head cleaning diskettes with cleaning fluid.
2. Keep away from children reach and flames.
3. Please keep fluid cover firmly tightened.
4. Spare cleaning fluid is sold separately.