




The edge of the pcb must be inserted all the way up in the notch of the edge connector.

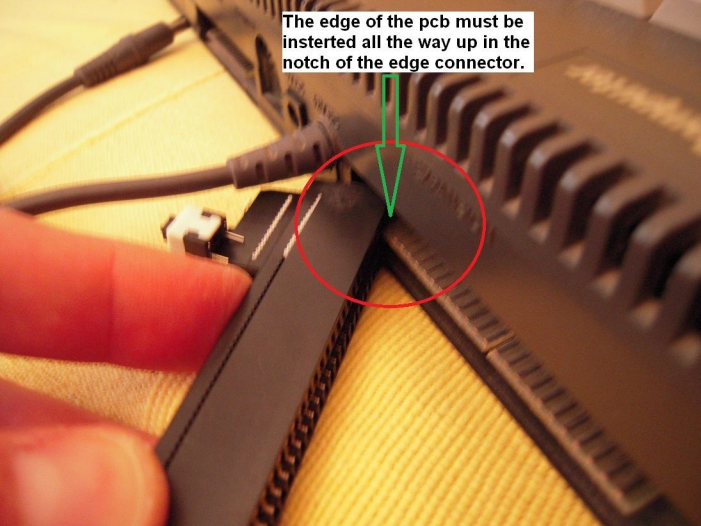

**This side must
be all left over**

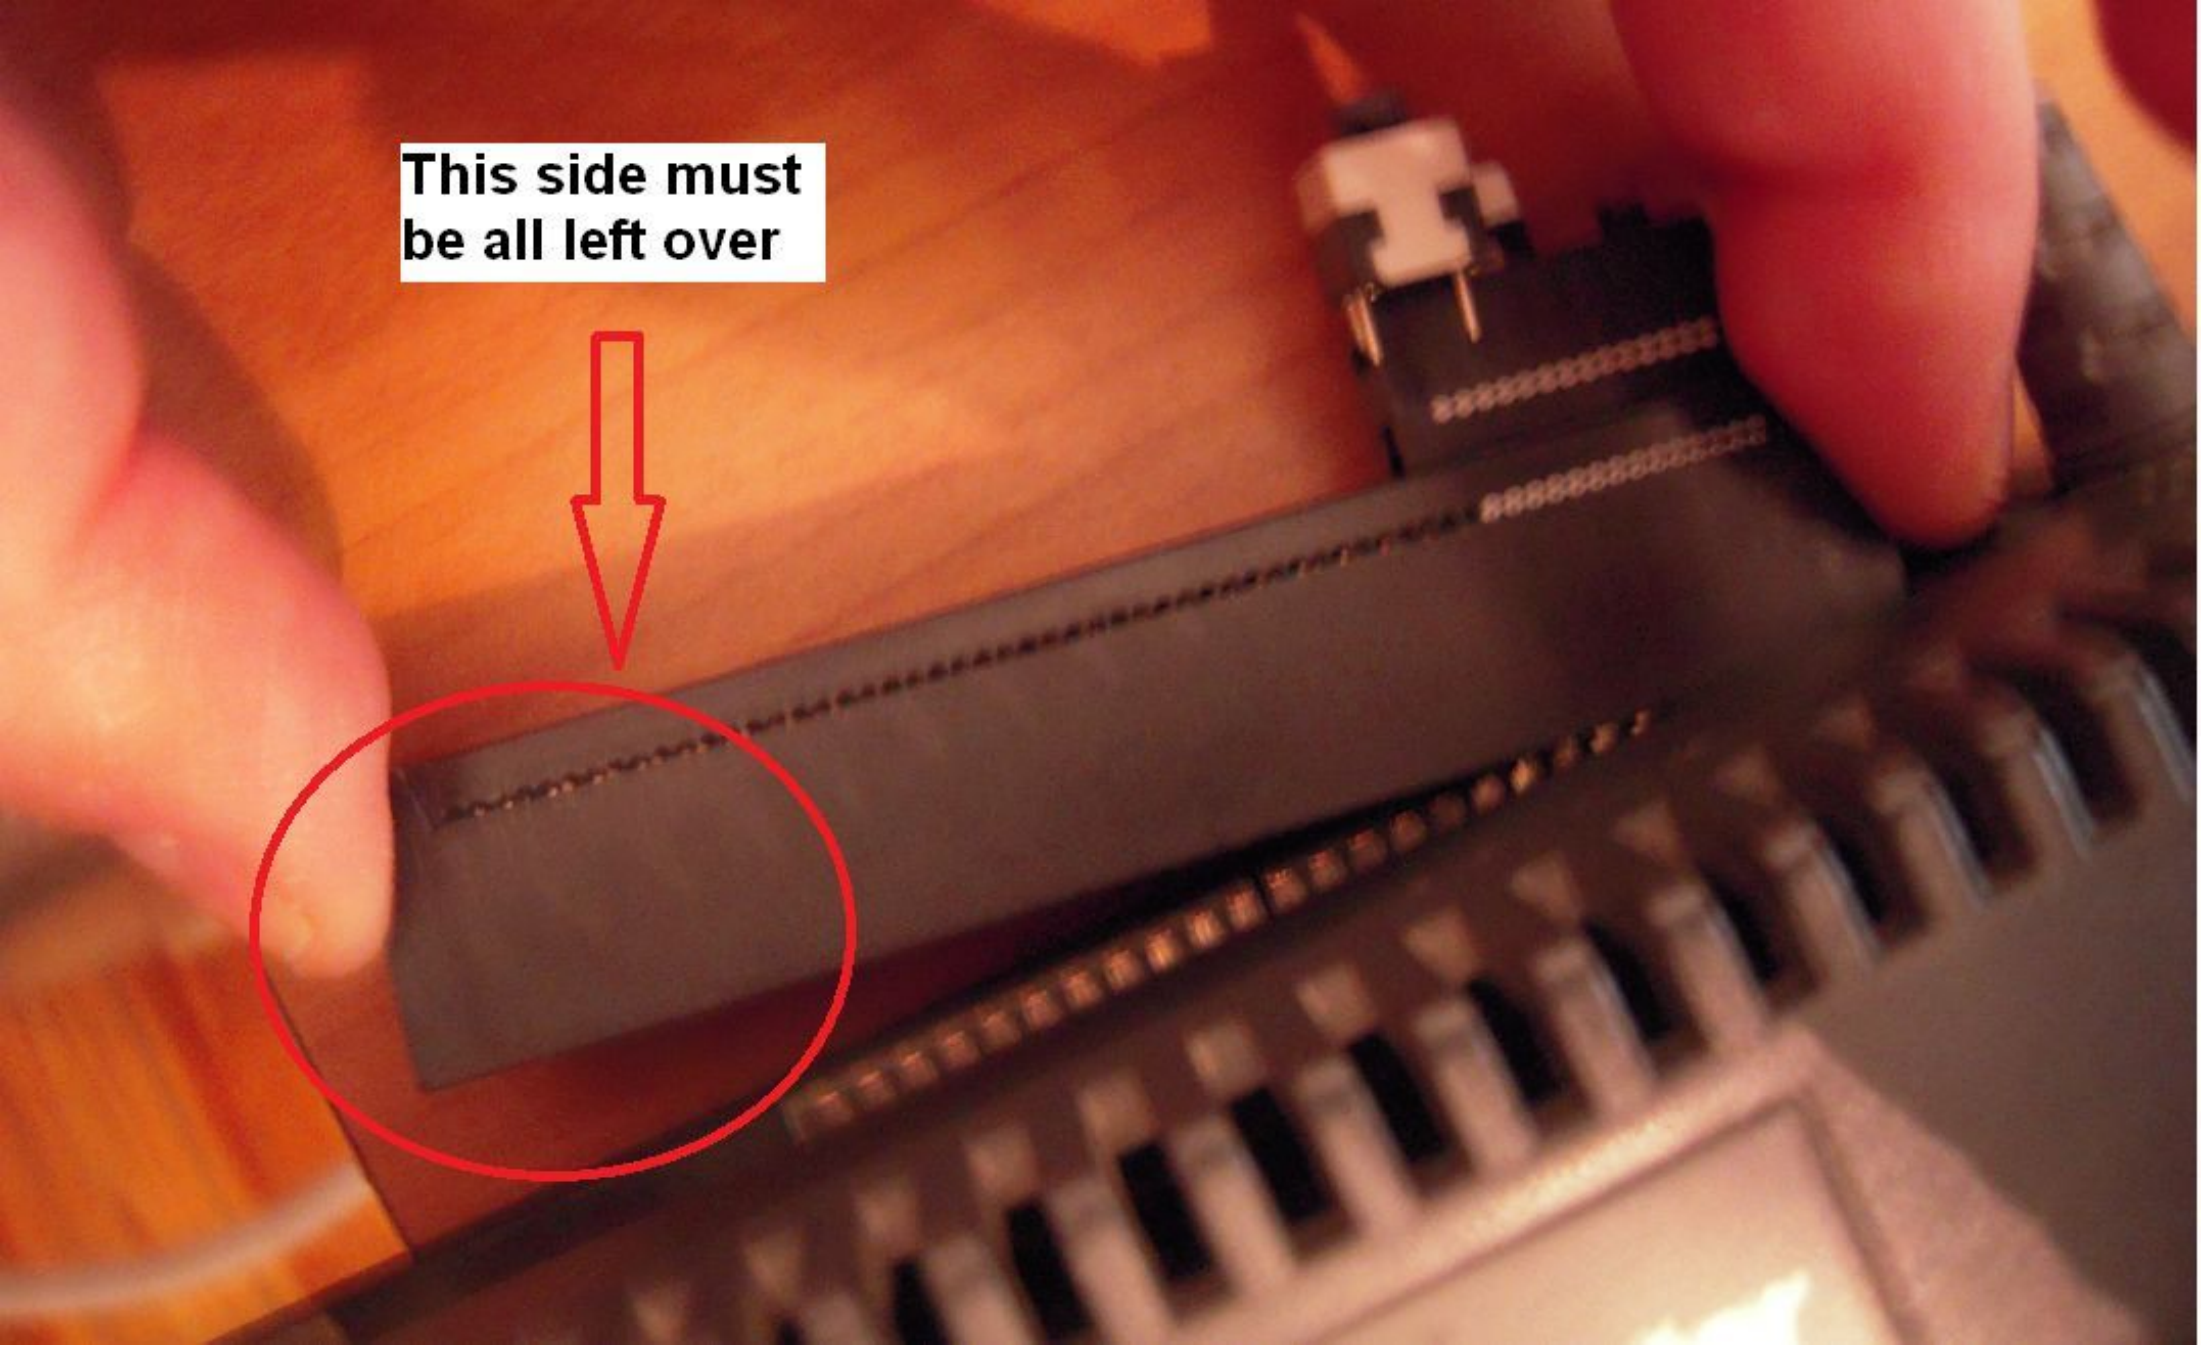

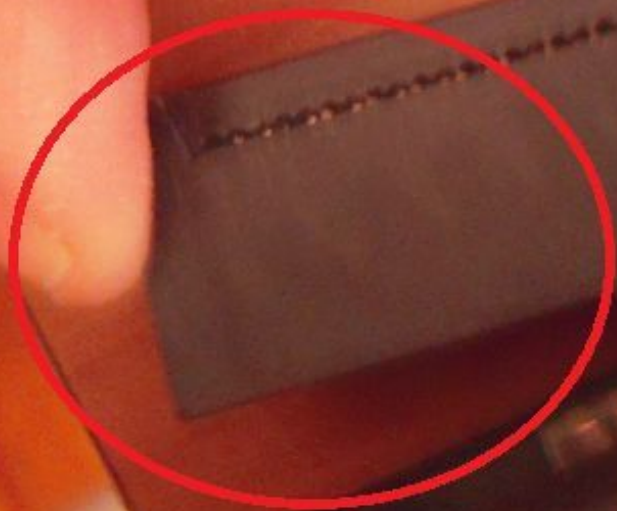

128K Colour Personal Computer

